WOODStore.net

Browse more than 1,300 woodworking project plans, DVDs, back-issue collections, videos, tool reviews, books, & more.

Thank You!

Thank you for ordering this WOOD® magazine download. We hope you enjoy being part of our online experience and that you have fun expanding your woodworking skills.

Please remember that this copyrighted material is for your use only. It is unlawful to share this file with someone else or to reprint it in any form.

Dave Campbell

Editorial Content Chief, WOOD magazine



Adobe Acrobat Reader Troubleshooting Guide

If you can read this page, your Acrobat Reader program is working correctly! But you may still have problems or specific issues, such as printing and saving your downloadable file.

My printer won't print the text correctly

Almost all printing problems are due to not enough free system resources memory. The files are very memory intensive because they include graphics, text, and photos. Close all other programs/applications and print directly out of the Acrobat Reader program, not your Web browser.

Patterns are not printing full-size

Make sure your printer is set to print at 100 percent, "print to fit" is not checked and "page scaling" is set to "none". These settings are selected in the printer setup or printer options.

I can't find my file now that it's downloaded

Rather than viewing the plan in your browser, you must save it to your hard drive. Download the file again, except this time try right-clicking on the red download button. A menu window will open. Select "Save target as" or "Save link as" to save the file to your hard drive. Once saved, you can open it up with Adobe Acrobat Reader.

For more details on using Adobe Acrobat Reader please visit our online help section at:

woodmagazine.com/adobe

WOOD Store

Customer Favorites

Shop Tools & Accessories



Indoor Furniture



Outdoor Furniture



Mission Furniture



Visit the WOOD Store at:

WOODStore.net



True Up Your Jointer Tables

f, despite your best efforts, your jointed edges and faces aren't truly flat or joints in panel glue-ups show gaps, it's time to check the alignment of your jointer tables. The end of one or both tables may sag, or the tables might be twisted relative to each other. Here's how to diagnose the problem and then correct it.


Note: The fixes described here apply to jointers with dovetailed ways. That covers most floor-standing, sub-\$1,000 jointers. For jointers with parallelogram beds, refer to the owner's manual.

Check for twist and dips

To find if the tables are parallel across their widths, make winding sticks by ripping two scraps to equal width and crosscuting them just longer than the width of the jointer tables. Wrap blue tape around the long edge of one; then stand it on the far end of the outfeed table. Place the other stick on the opposite end of the infeed table as shown *above*. Squat down about 3' from the end of the infeed table until you see a sliver of blue from the far stick above the edge of the near stick. If the blue

line tapers, the tables aren't parallel; adjust them as described in the next paragraph. If the blue line is even, skip to **See if it sags** on *page 21*.

Now check to see if the outfeed table sits parallel to the cutterhead. Remove the cutterhead guard and push the fence back fully. Set the outfeed table flush with the cutterhead body (not the knives) as shown *below*. Check the table edge at its front and back. A gap below the straightedge reveals a need to raise that side of the table. Follow the steps in the photos at the top of *page 21* to level

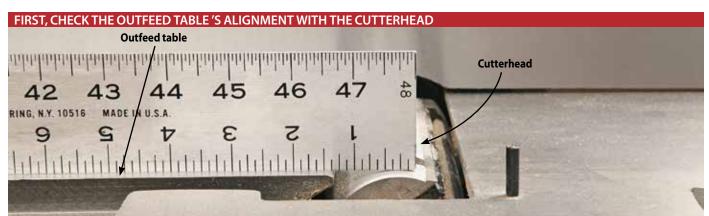

Set the outfeed table flush with the cutterhead, then check for gaps between the straightedge and table.

20 WOOD magazine July 2012



CLEAN AND LUBE THE WAYS AND GIBS, THEN SHIM AS NEEDED TO MAKE THE TABLES PARALLEL Outfeed table Dovetail ways

Loosen the gib bolts and table lock. Direct WD-40 or a similar solvent between the dovetail ways on both sides to dissolve the old grease.



Lift the end of the table to allow the solvent to reach all areas. Force out any remaining grease and grime with compressed air.



Slide the gibs (metal bars between the dovetail ways) out partially and apply a liberal coat of lithium soap grease; then reinsert them.



Cut .005 brass shim stock (Source) as long and wide as the gib, grease the shim, and slide it behind the gib. Add additional shims if needed.

the table to the cutterhead. This can be a tedious trial-and-error process; you'll make an adjustment, retighten screws, recheck the table alignment, and then repeat the process if needed.

With the outfeed table now parallel to the cutterhead, repeat the winding-stick test. If twist still exists, make the same adjustments on the infeed table.

See if it sags

Now that the tables rest parallel with each other and the cutterhead, check them for sag along their length. Raise the tables so they align just above the cutterhead. Span both tables with a long straightedge, checking at the front and back edges of the table, below. Gaps below the straightedge indicate that one end of a table rests too low.

To correct this, place shim stock under the dovetail ways, beginning with the outfeed table. Shim the infeed table only if needed. Place 3/8"-long shims toward the upper end of the ways to raise the end of the table nearest the cutterhead; or toward the lower end to raise the outer end of the table. Shim

the front and rear ways the same amount. After shimming, repeat the tests to check that the tables rest parallel in both planes.

Lastly, check that each end of each knife rests parallel to the outfeed table. Set the table even with a knife at its highest point. Rest a straightedge across the knife and the outfeed table as when checking the table to the cutterhead. Adjust each knife as needed. 🤻

Source: .005 brass sheets no. 106237, \$3.49, shophobbylobby.com



Shine a flashlight behind a straightedge to highlight gaps that require you to make adjustments.

21 WOOD magazine July 2012