


# Onlay accents made easy *WOOD*<sup>®</sup> Pattern Insert (Part 1)

(connect parts 1 and 2 for whole pattern)

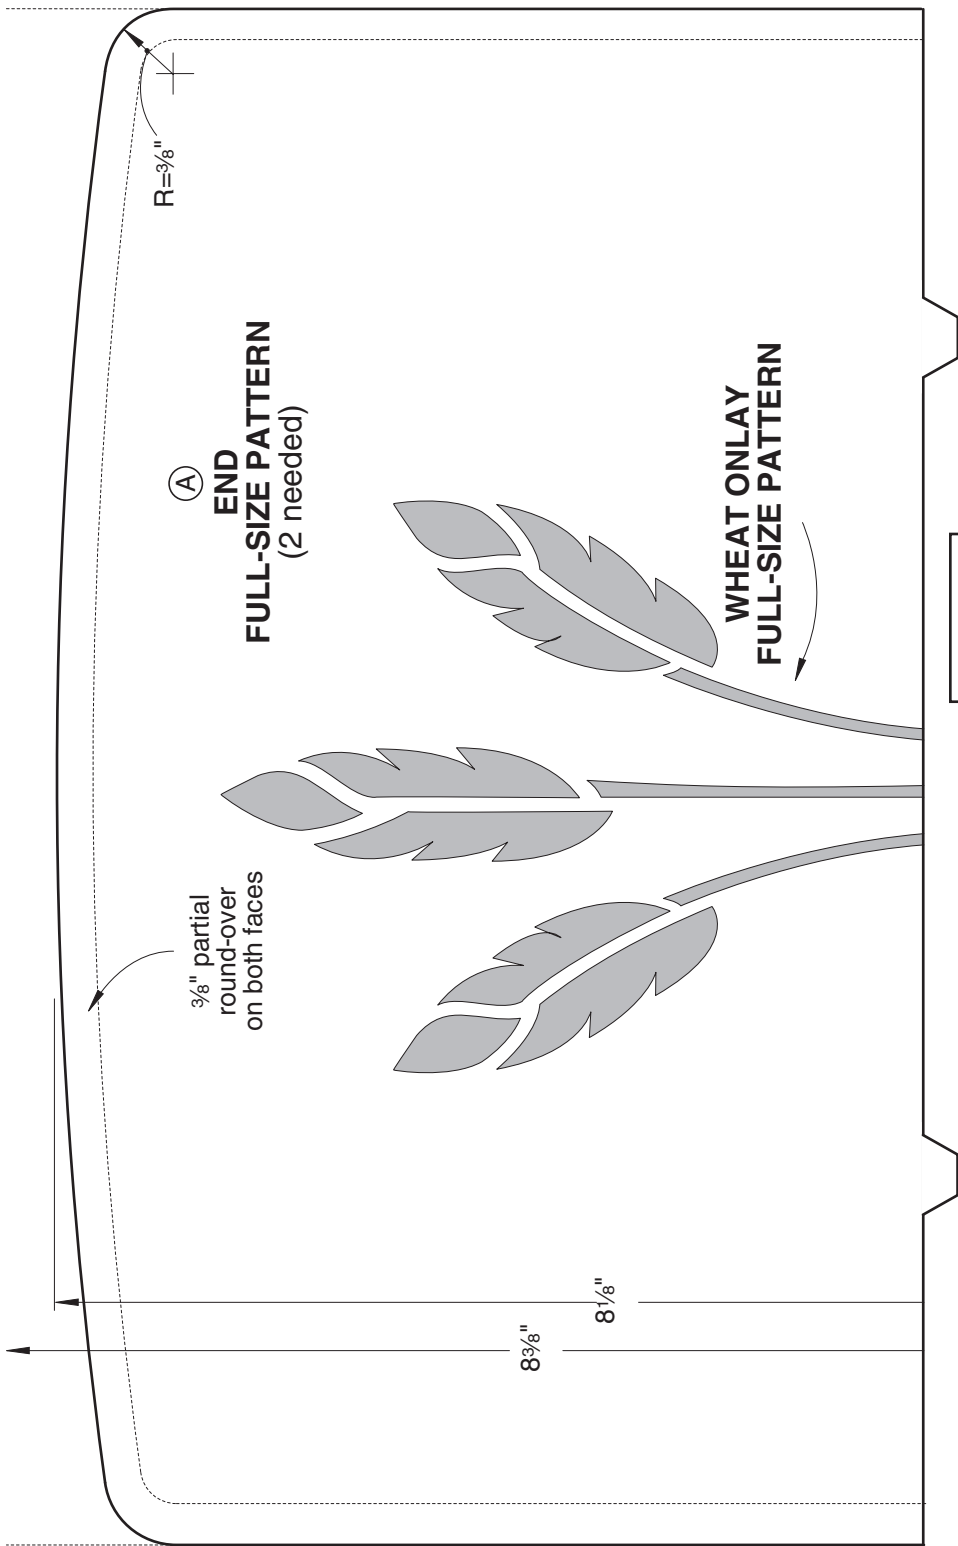

To ensure full-size patterns are correct size, your printer should be set to print at 100% (not fit to page). Measure full-size patterns to verify size.

