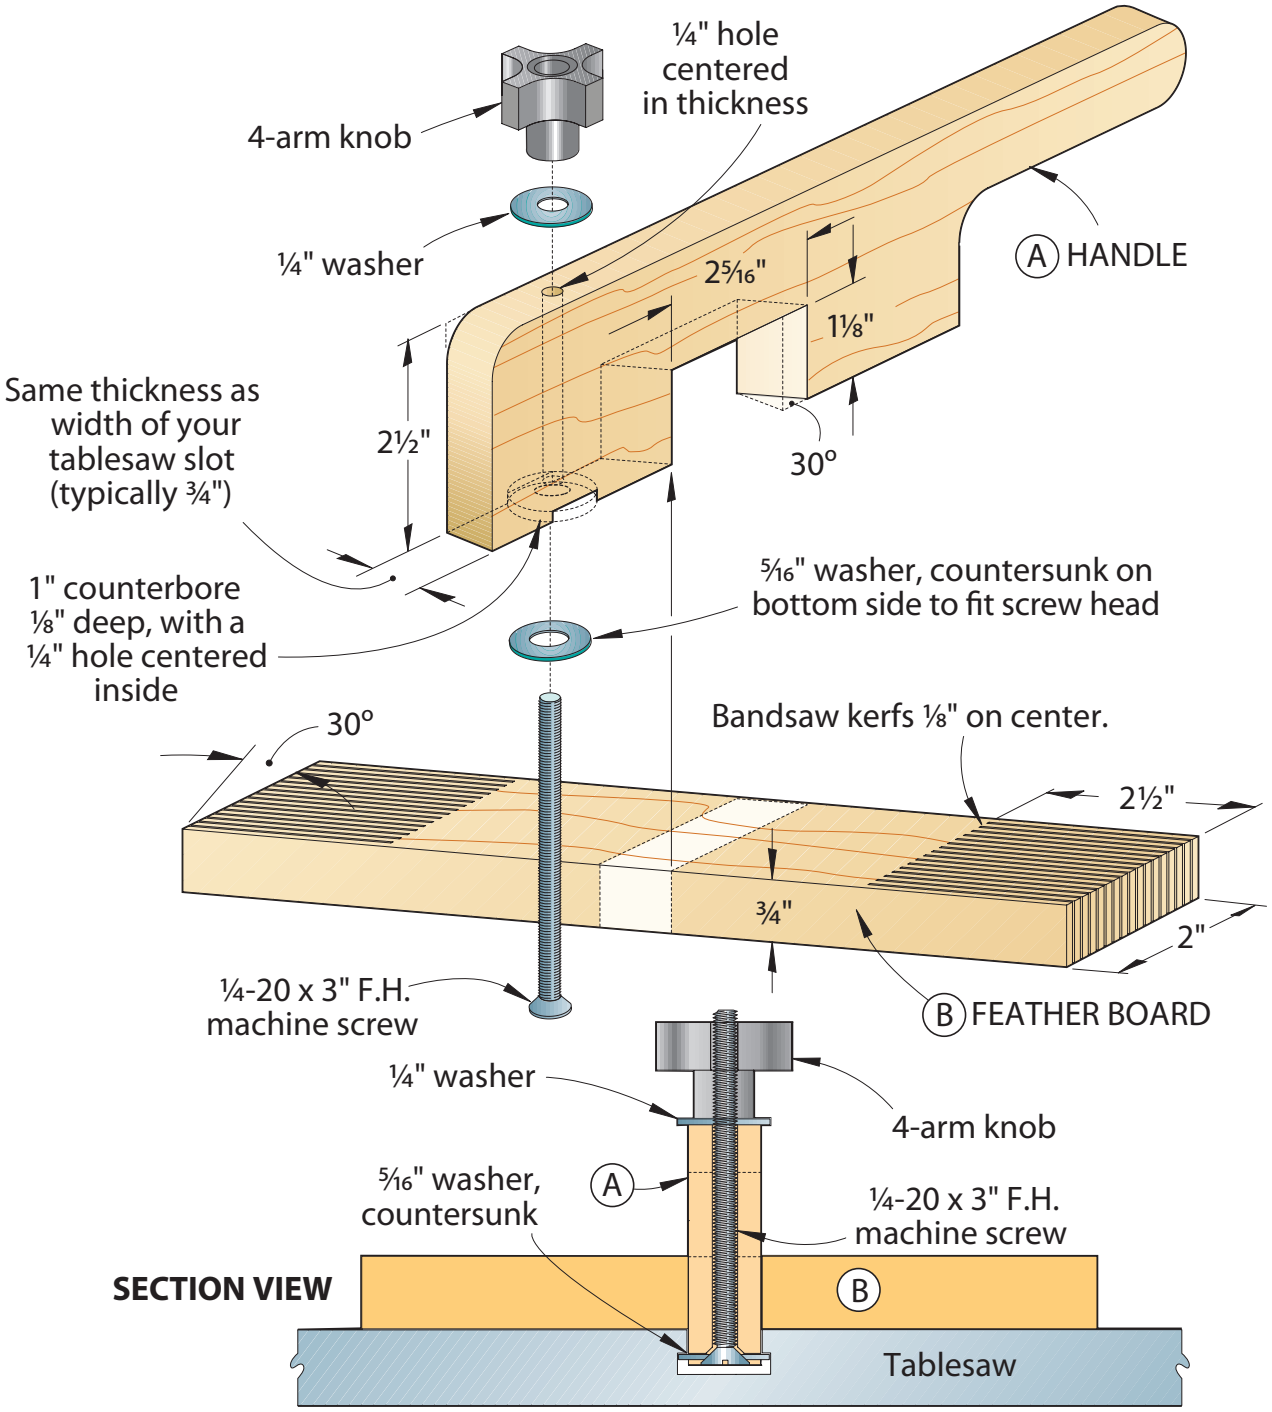
¼" hole centered in thickness
4-arm knob
¼" washer
A HANDLE
2⁵⁄₁₆"
1⅛"
Same thickness as width of your tablesaw slot (typically ¾")
2½"
30°
1" counterbore ⅛" deep, with a ¼" hole centered inside
⁵⁄₁₆" washer, countersunk on bottom side to fit screw head
30°
Bandsaw kerfs ⅛" on center.
2½"
¾"
2"
¼-20 x 3" F.H. machine screw
B FEATHER BOARD
¼" washer
4-arm knob
⁵⁄₁₆" washer, countersunk
A
¼-20 x 3" F.H. machine screw
SECTION VIEW
B
Tablesaw